


NOTICE DE MONTAGE


INSTALLATION INSTRUCTIONS

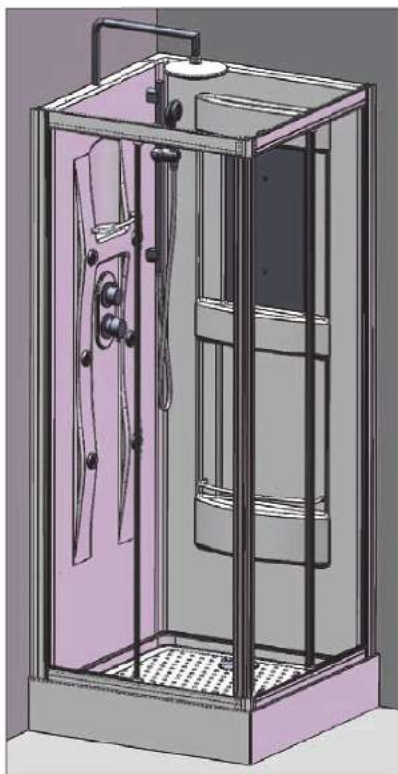


HYDRO





MECA







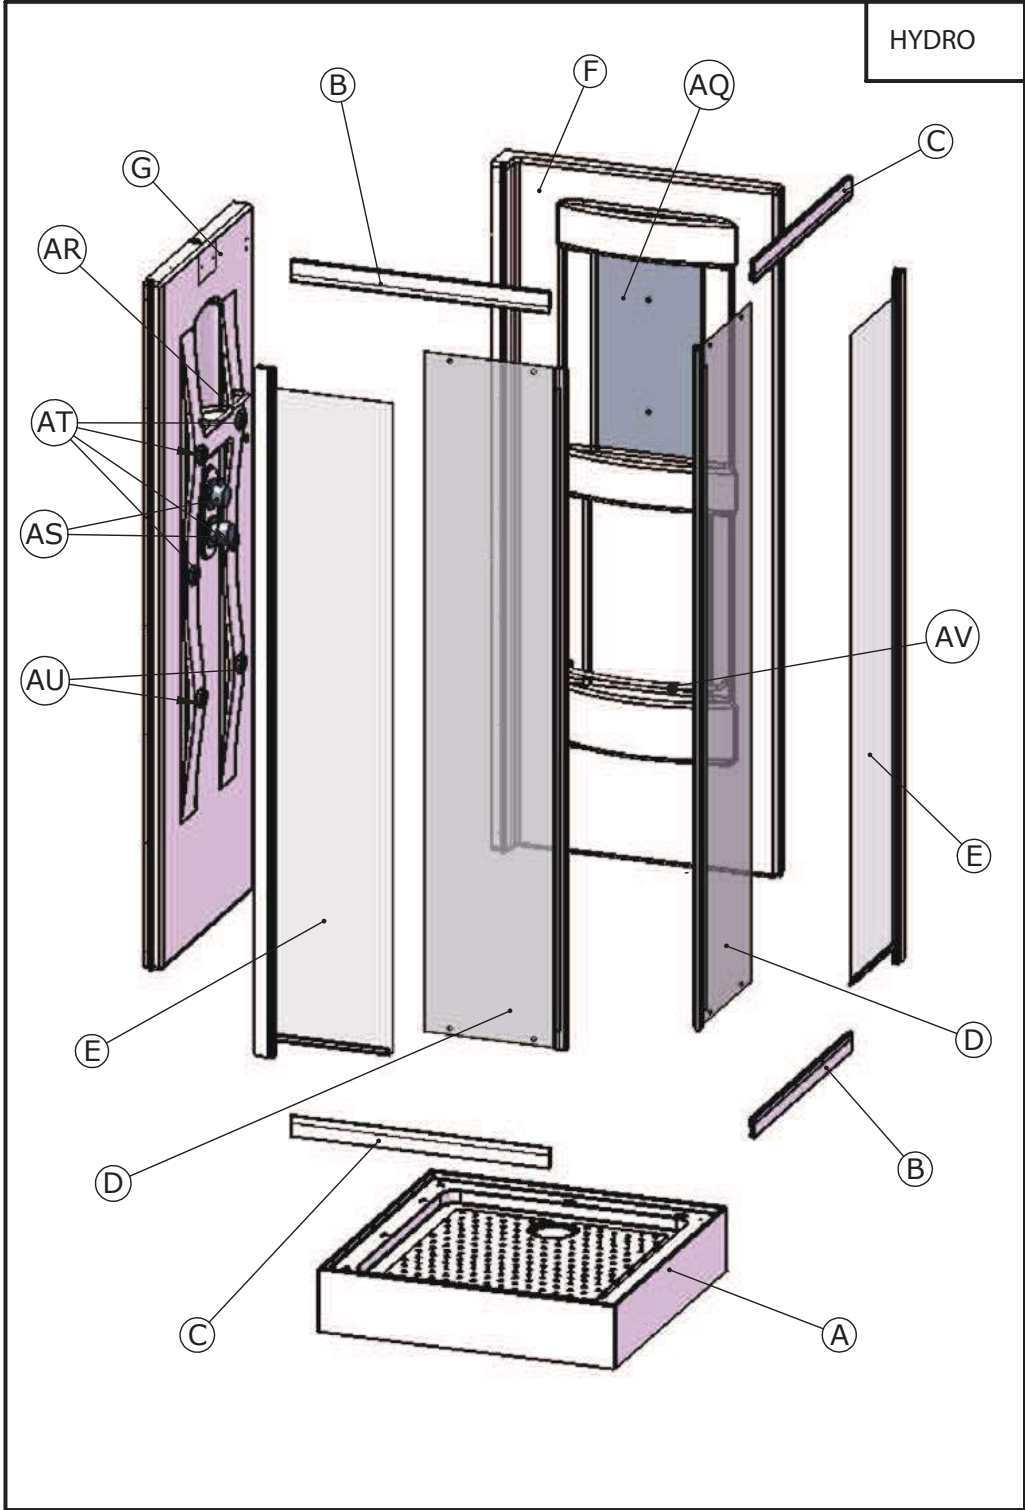


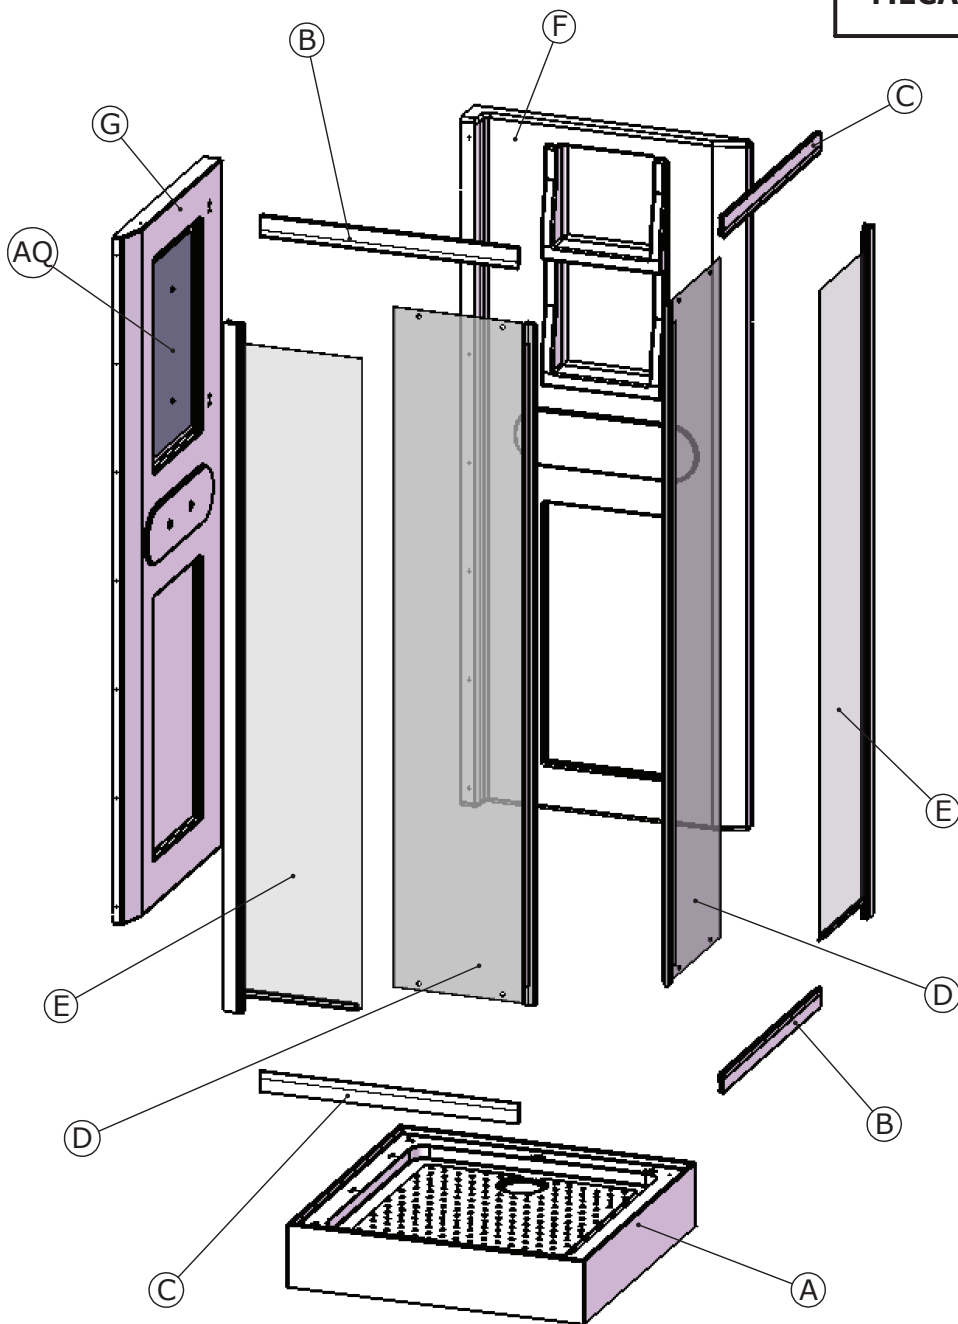

CODE COLIS (Voir repères en page 2)
PACKAGE CODE (See marks on page 2)






	VERRE GRANITE				VERRE TRANSPARENT	
	MECA		HYDRO		HYDRO	
	80X80	90X90	80X80 HT	90X90 HT	80X80 HT	90X90 HT
A	REC111	REC112	REC191	REC192	REC318	REC319
B	KIN016	KIN017	KIN016	KIN017	KIN016	KIN017
C						
D	KIN032	KIN034	KIN032	KIN034	KIN065	KIN067
E	KIN033	KIN035	KIN033	KIN035	KIN066	KIN068
F	KIN063	KIN064	KIN044	KIN046	KIN044	KIN046
G	KIN043	KIN045	KIN059	KIN060	KIN059	KIN060
AQ	KIN003					
AR	KIN036		KIN042		KIN042	
AS			KIN029		KIN029	
AT			BUS22		BUS22	
AU			BUS23		BUS23	
AV			KIN062		KIN062	

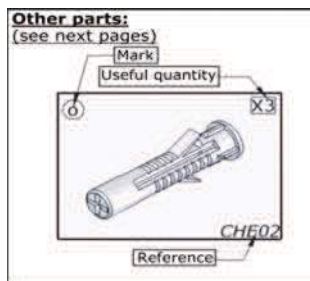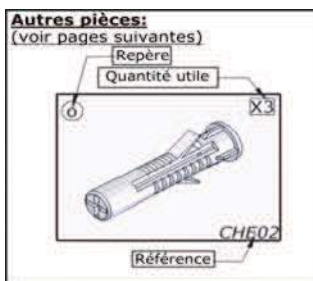

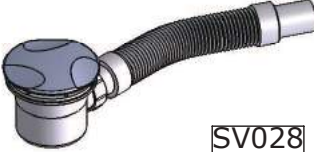
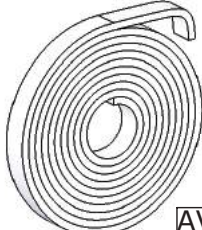
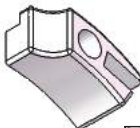
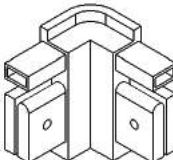

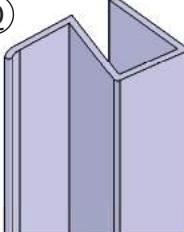

(H) x1  SV028 SV261	(I) x2  KIN005 KIN006	(J) x1  SV304
(K) x1  SV018	(L) x3  AV021	(M) x4  KIN008 KIN009
(N) x4  KIN008 KIN009	(O) x2  KIN010	(P) x1  AV126
(Q) x4  KIN025	(R) x7  KIN002	(S) x14  KIN002
(T) x7  KIN002	(U) x6  KIN002	(V) x6  KIN002
(W) x24  KIN015	(X) x8  KIN015	(Y) conditionné x2 sous le receveur <i>Packed under</i> <i>shower tray</i>  KIN001

Les quantités données sont les quantités utiles au montage. Les sachets fournis contiennent des pièces supplémentaires. The quantities given are what are required for the installation. There may be some surplus parts in the package provided.





DES 652I

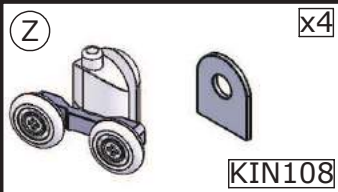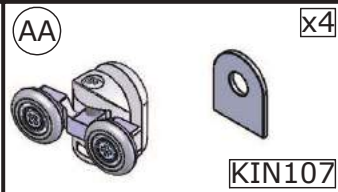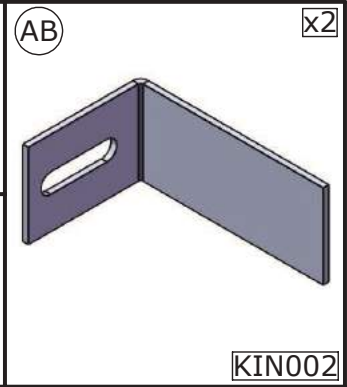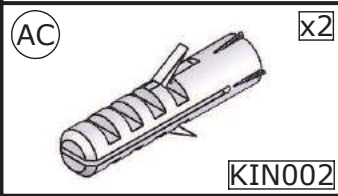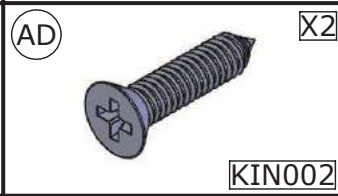 Z x4 KIN108	 AA x4 KIN107	 AB x2 KIN002
 AC x2 KIN002	 AD x2 KIN002	

HYDRO

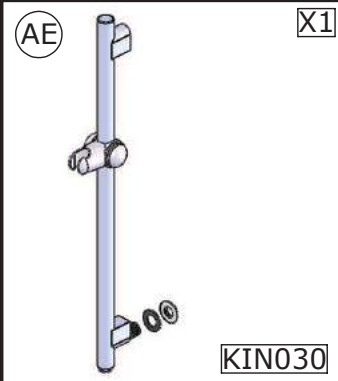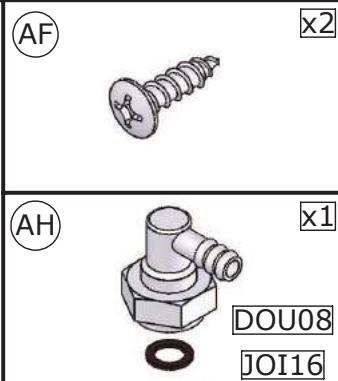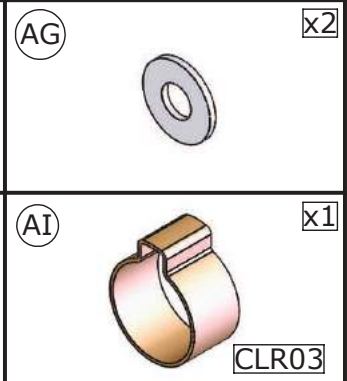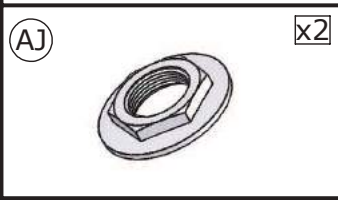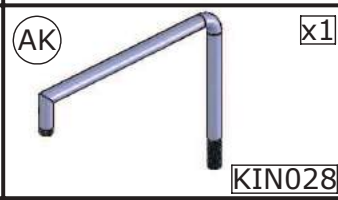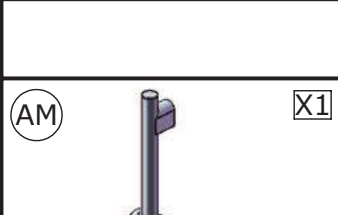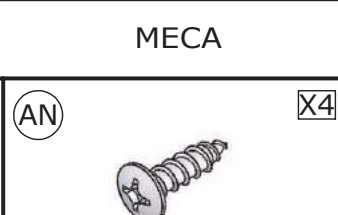 AE x1 KIN030	 AF x2 DOU08 JOI16	 AG x2 CLR03
 AH x1 KIN028	 AI x1 KIN027	
 AJ x2 KIN014	 AK x1 KIN036	
 AL x1 KIN014		


MECA

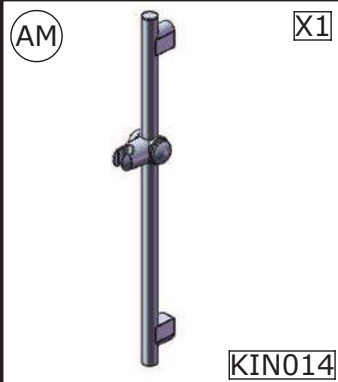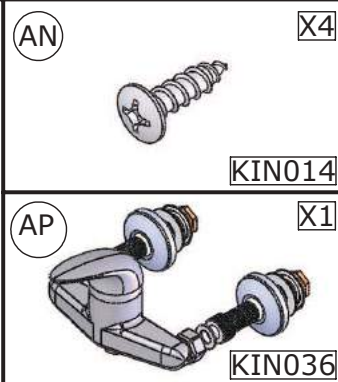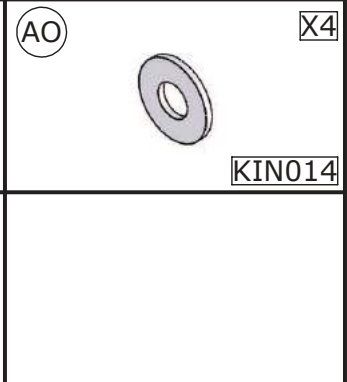 AM x1 KIN014	 AN x4 KIN014	 AO x4 KIN014
	 AP x1 KIN036	



Les quantités données sont les quantités utiles au montage. Les sachets fournis contiennent des pièces supplémentaires.
The quantities given are what are required for the installation. There may be some surplus parts in the package provided.

Matériel nécessaire


Tools required

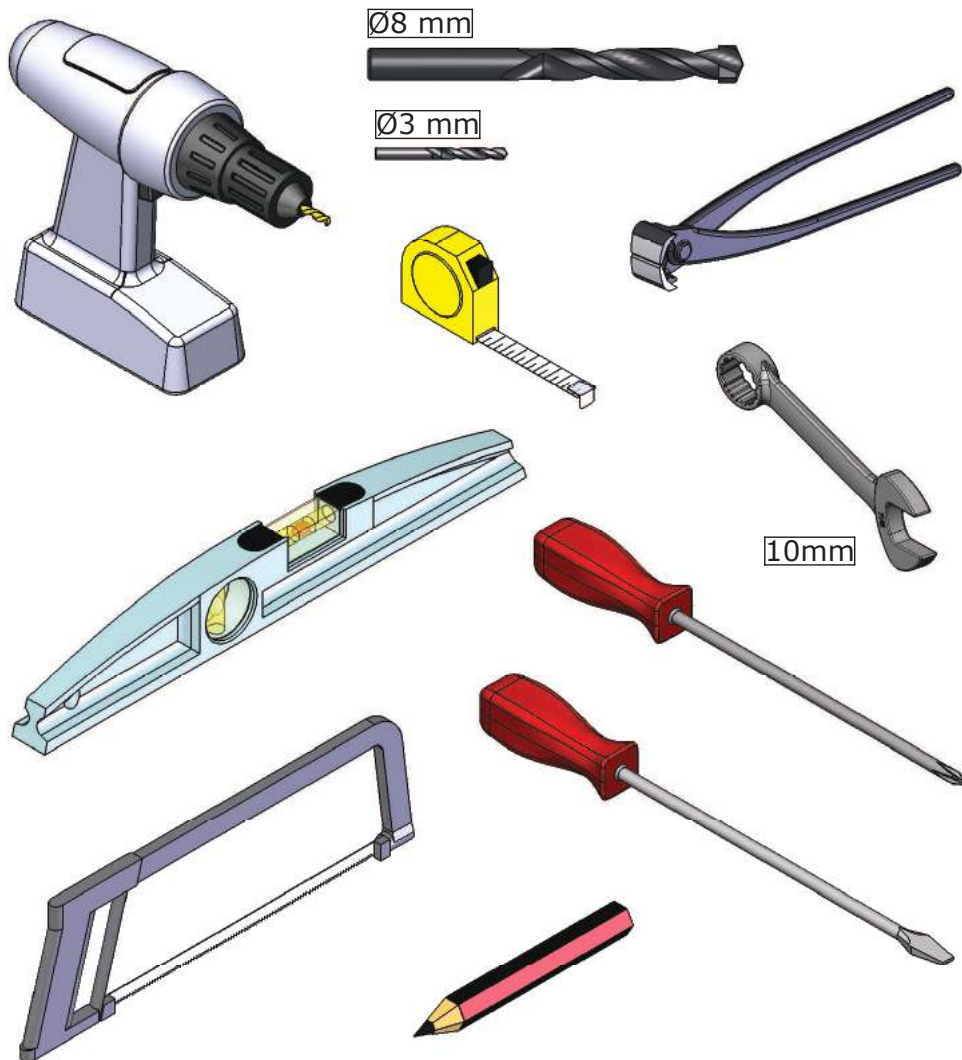


01

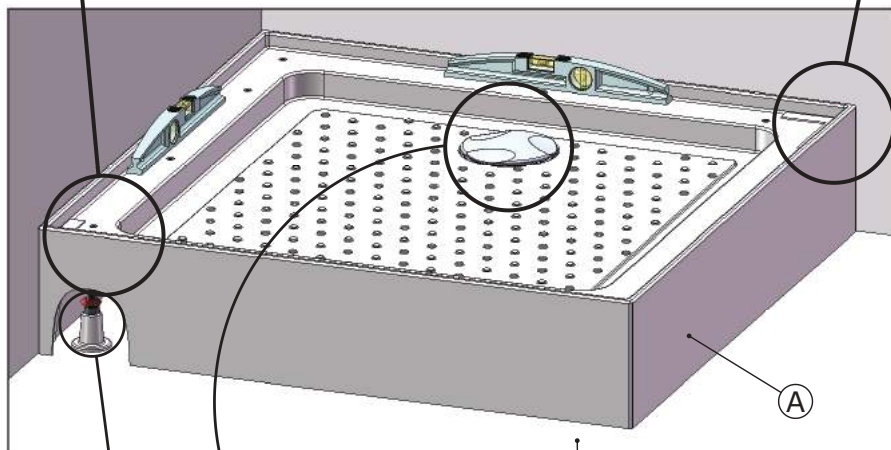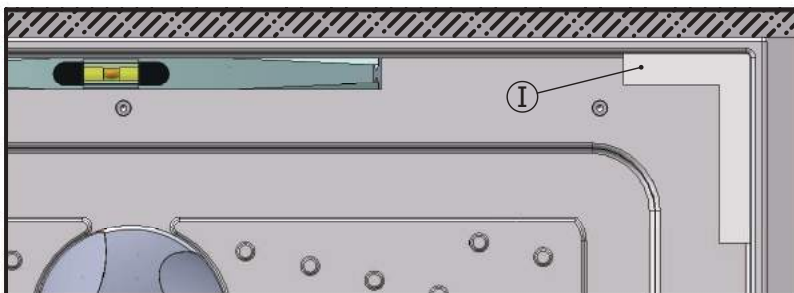


Sol rigide indispensable
The underlying surface must be perfectly rigid



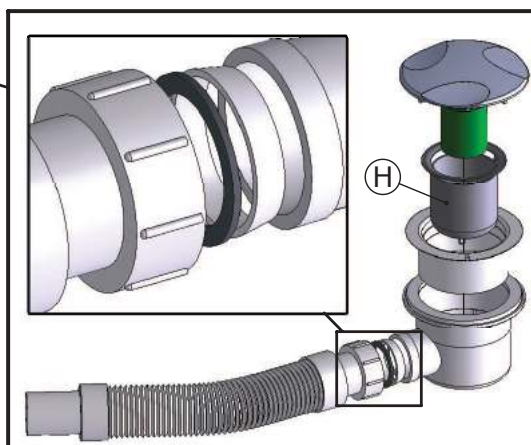



NE PAS METTRE DE COLLE ENTRE LE JOINT DE BONDE ET LE RECEVEUR.
DO NOT PUT GLUE BETWEEN THE WASTE TRAP SEAL AND THE TRAY.

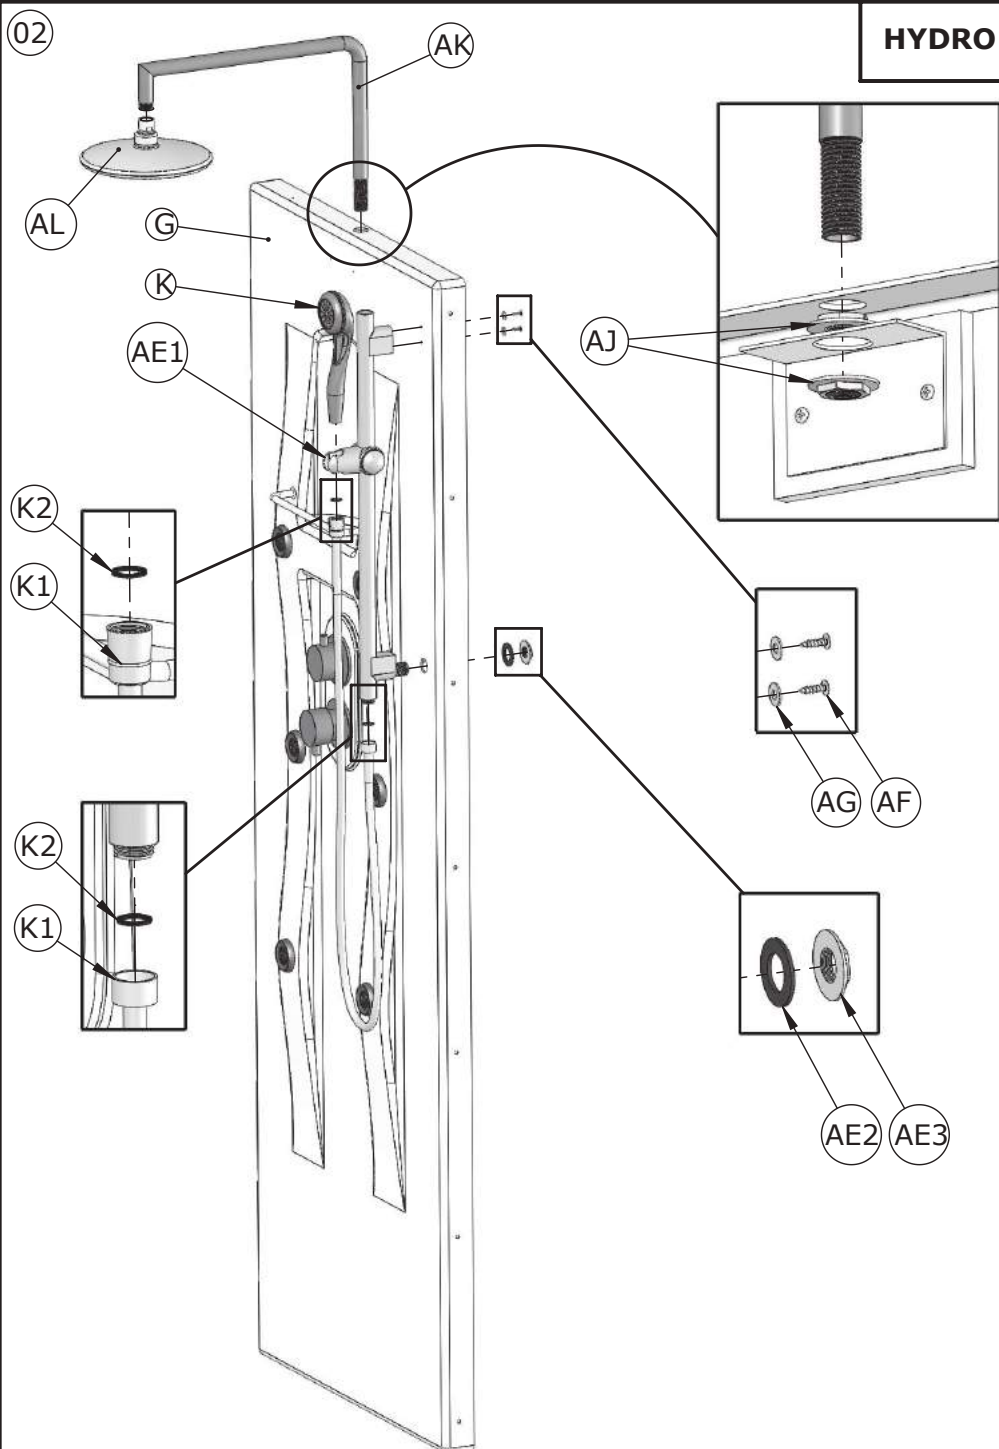HYDRO


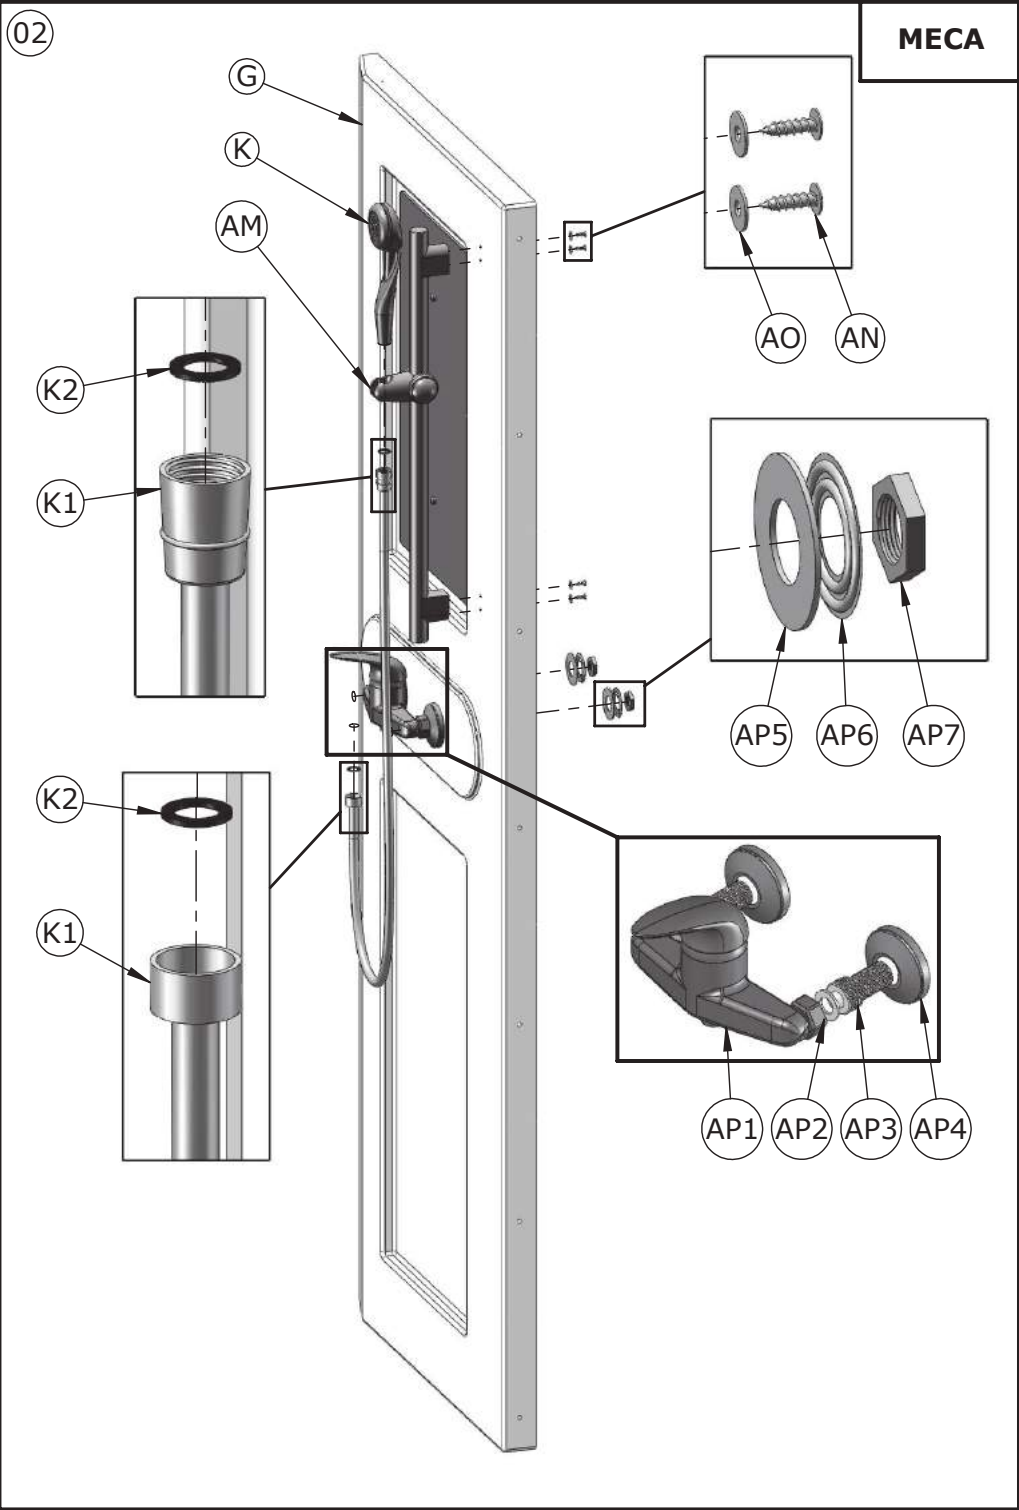


03

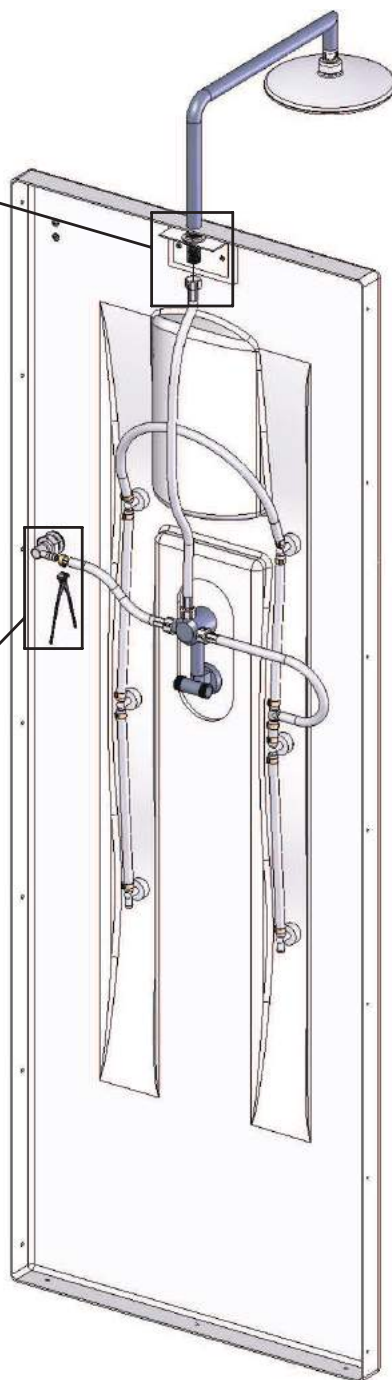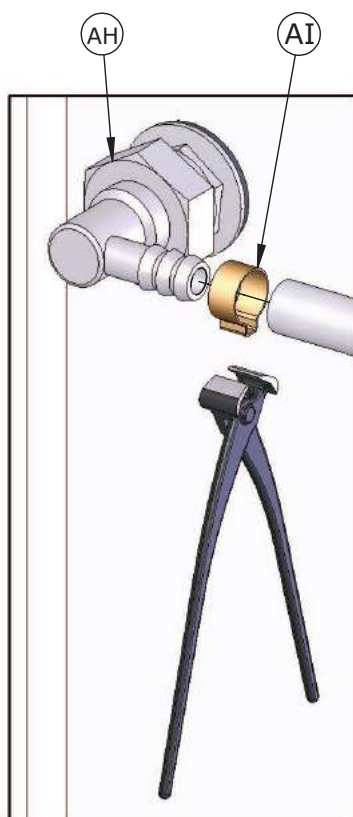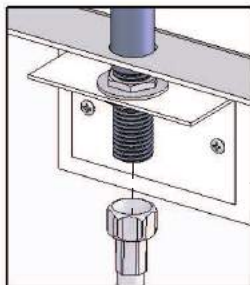


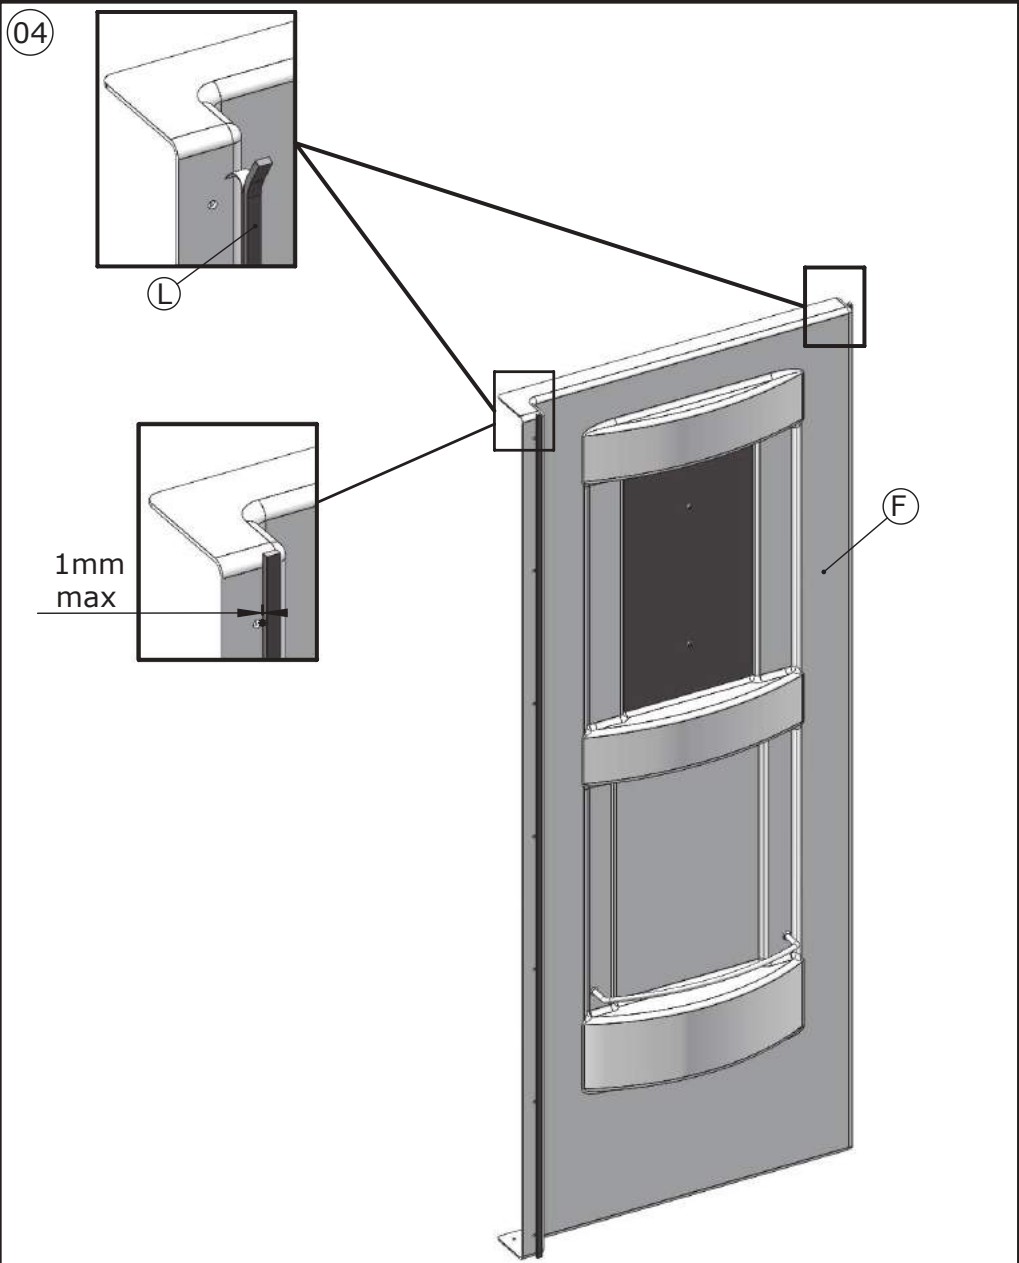


05

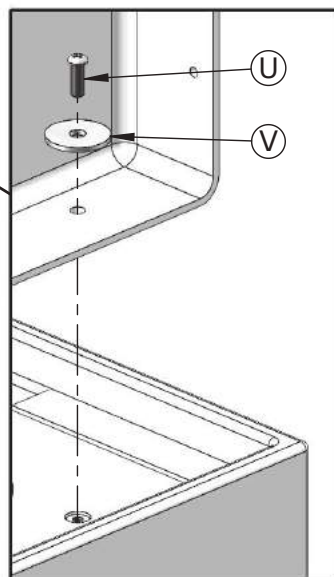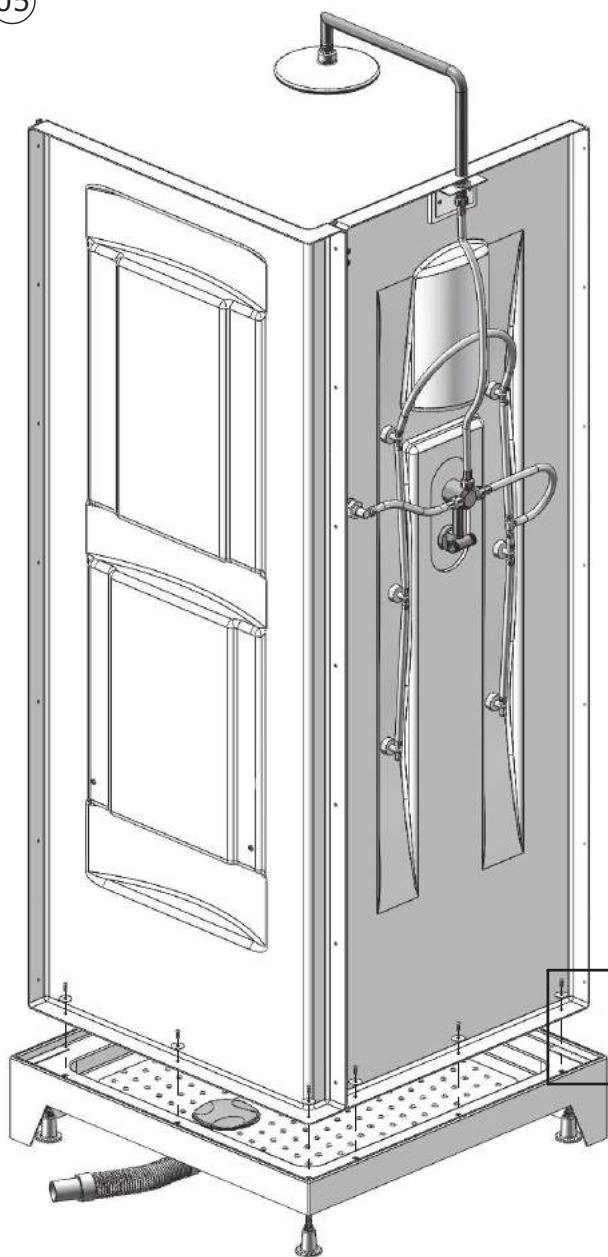


06



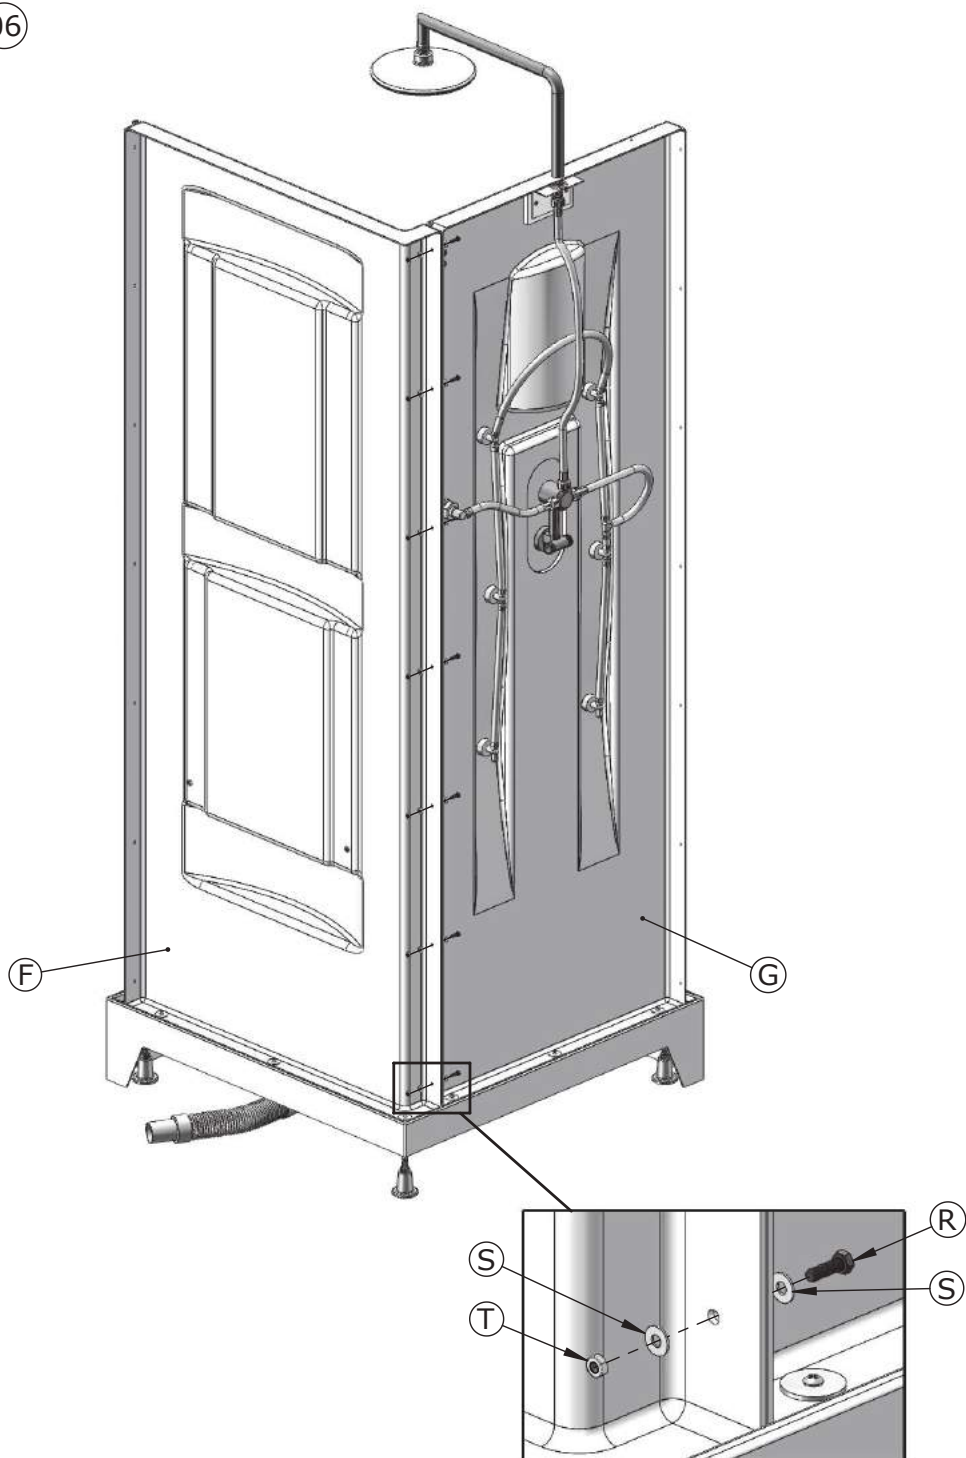


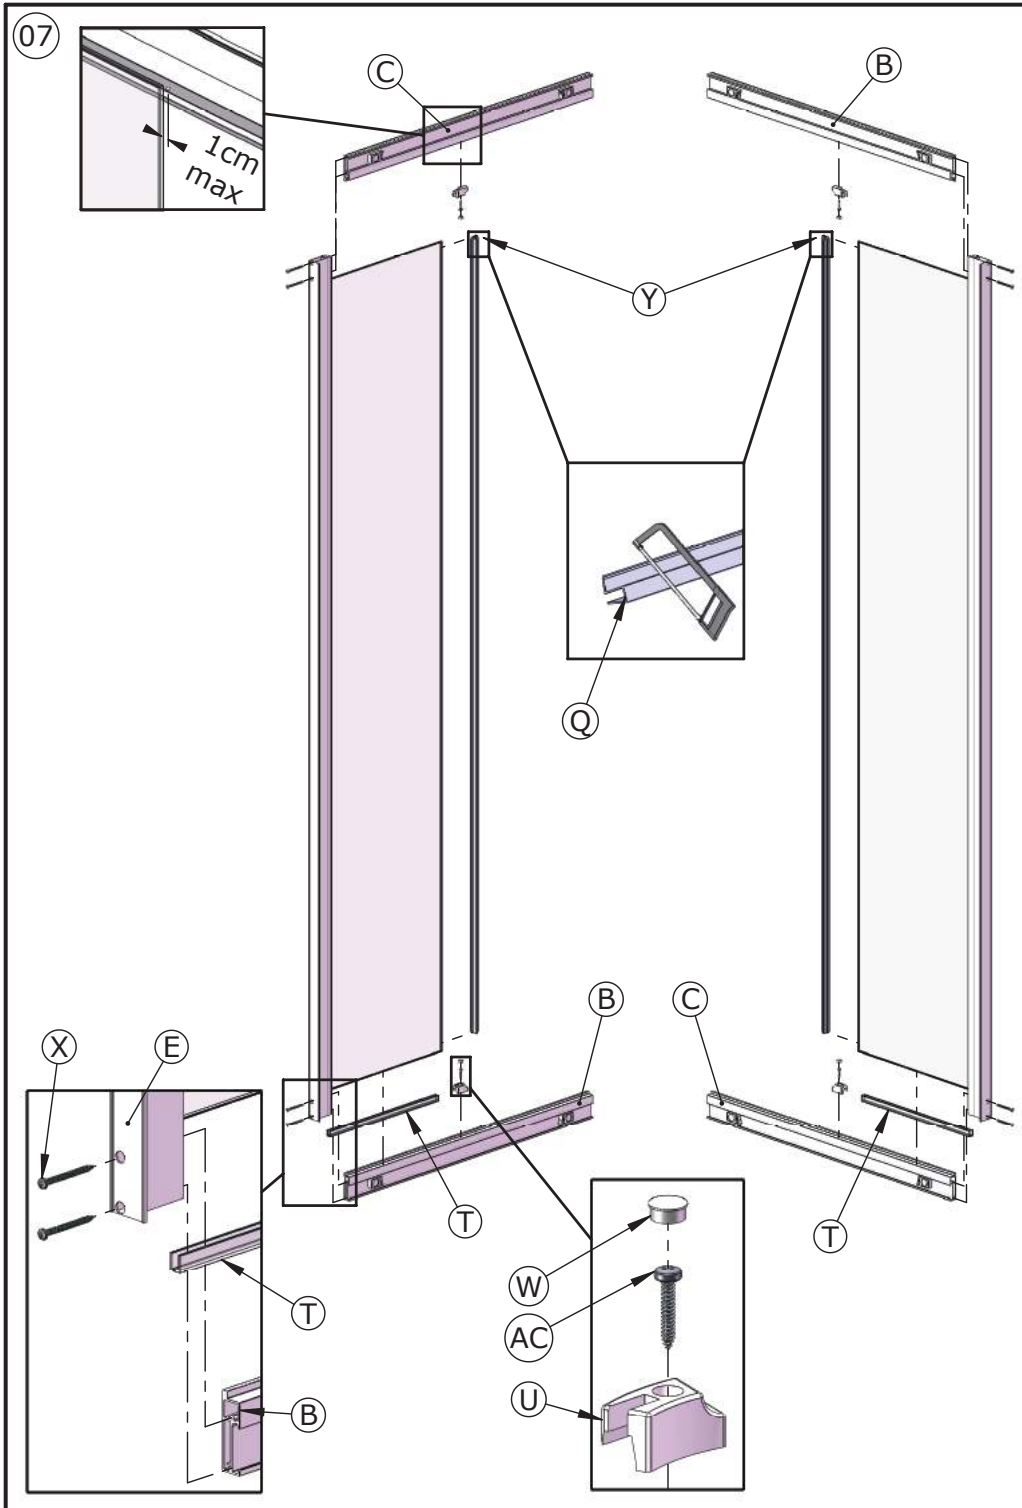


08

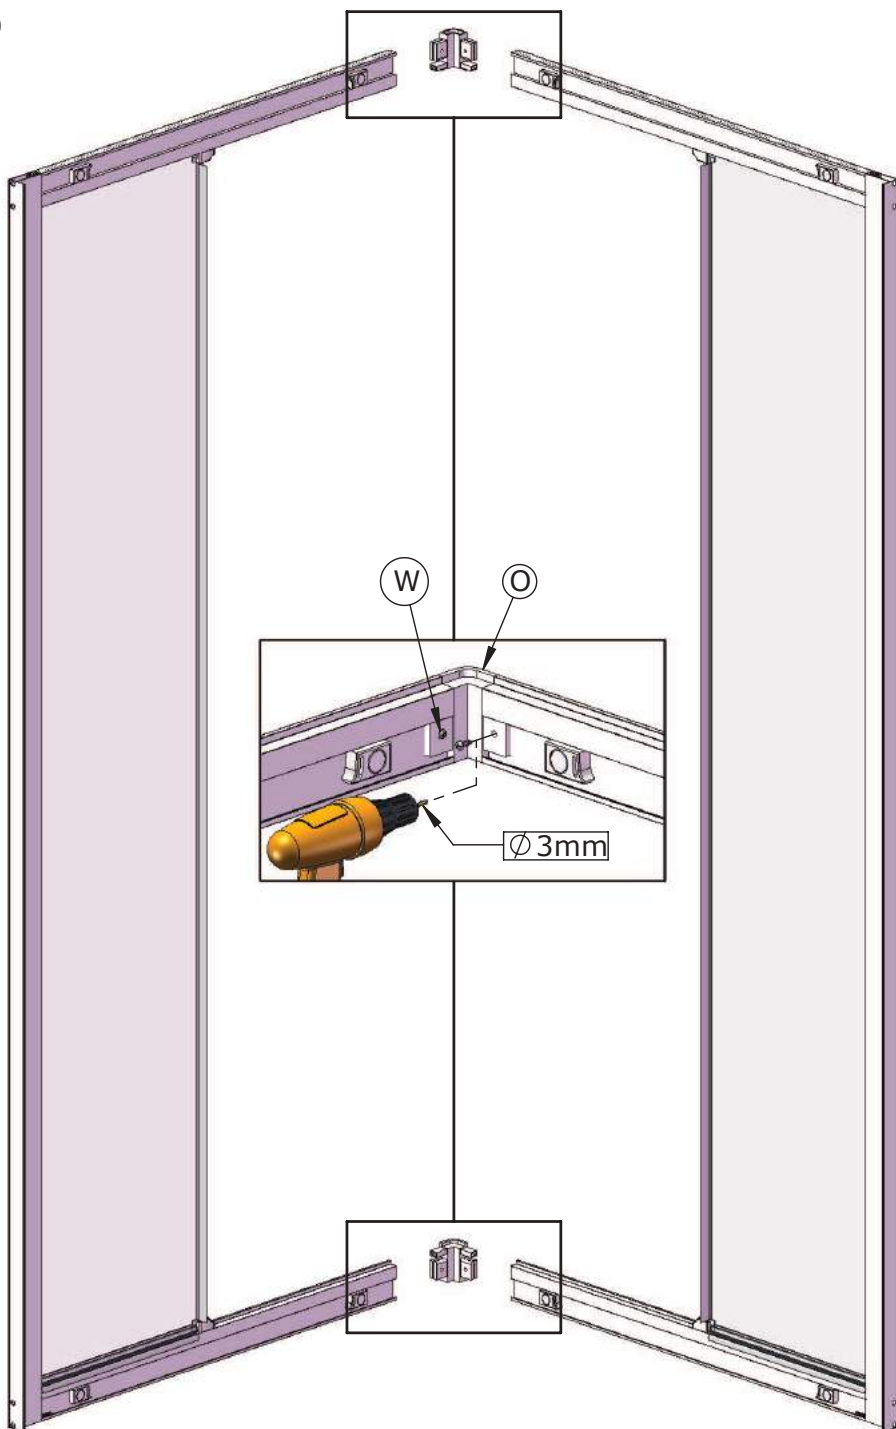


09

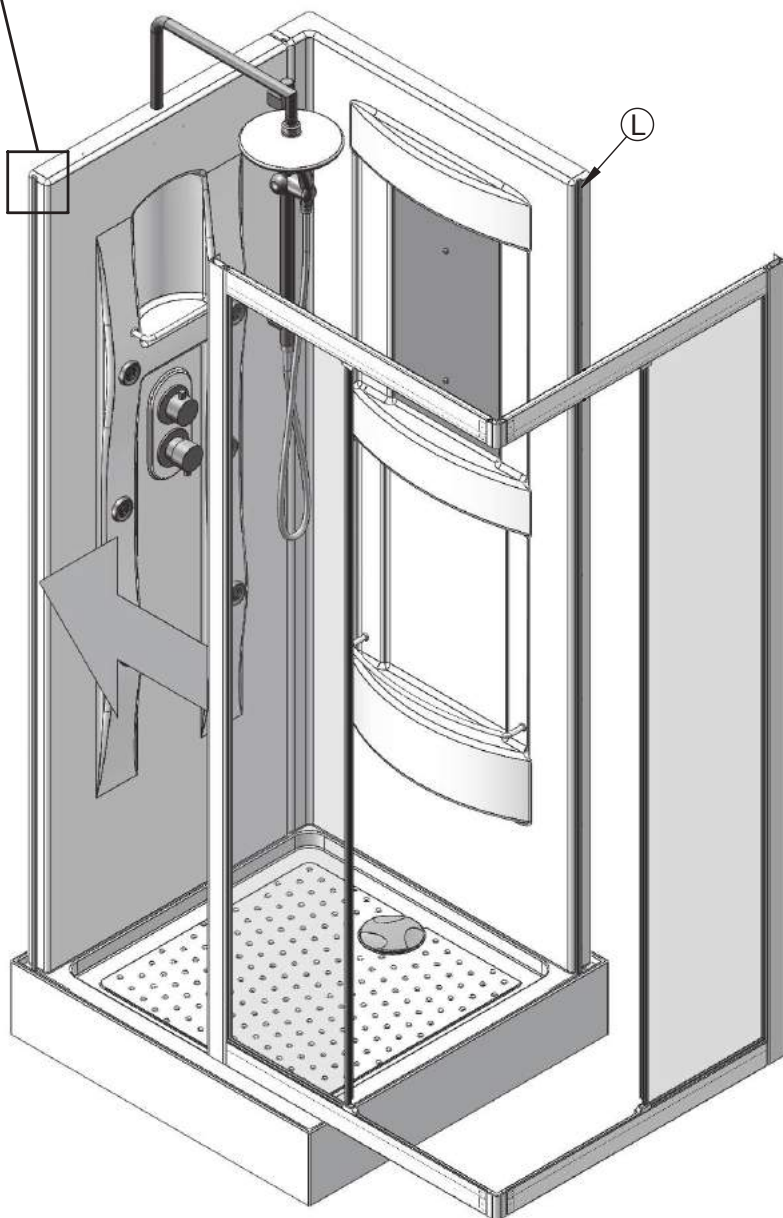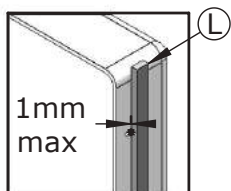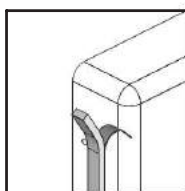


10


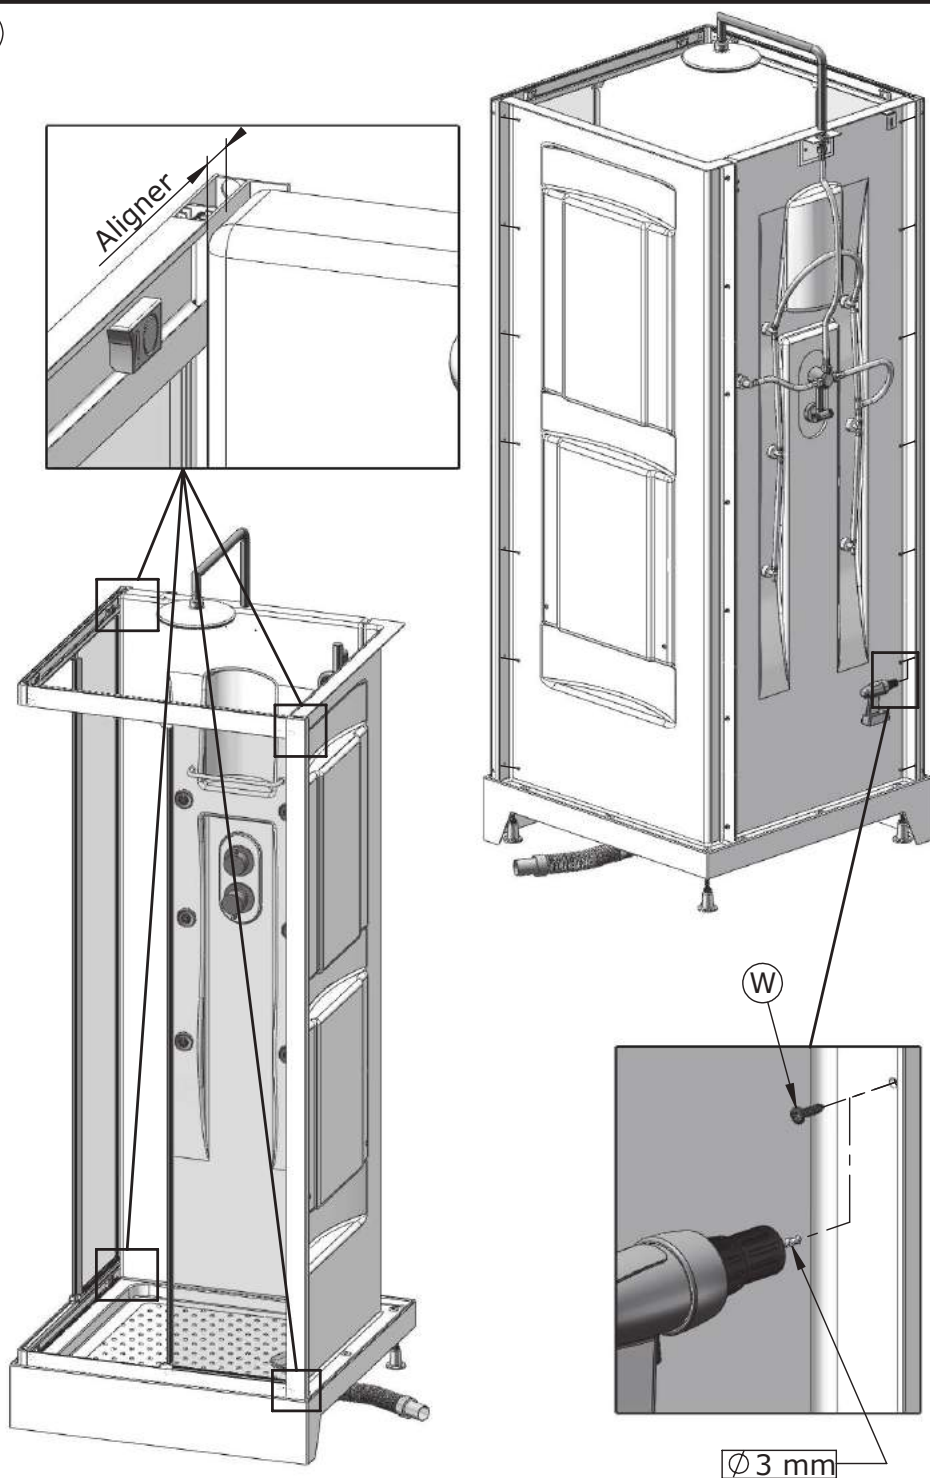


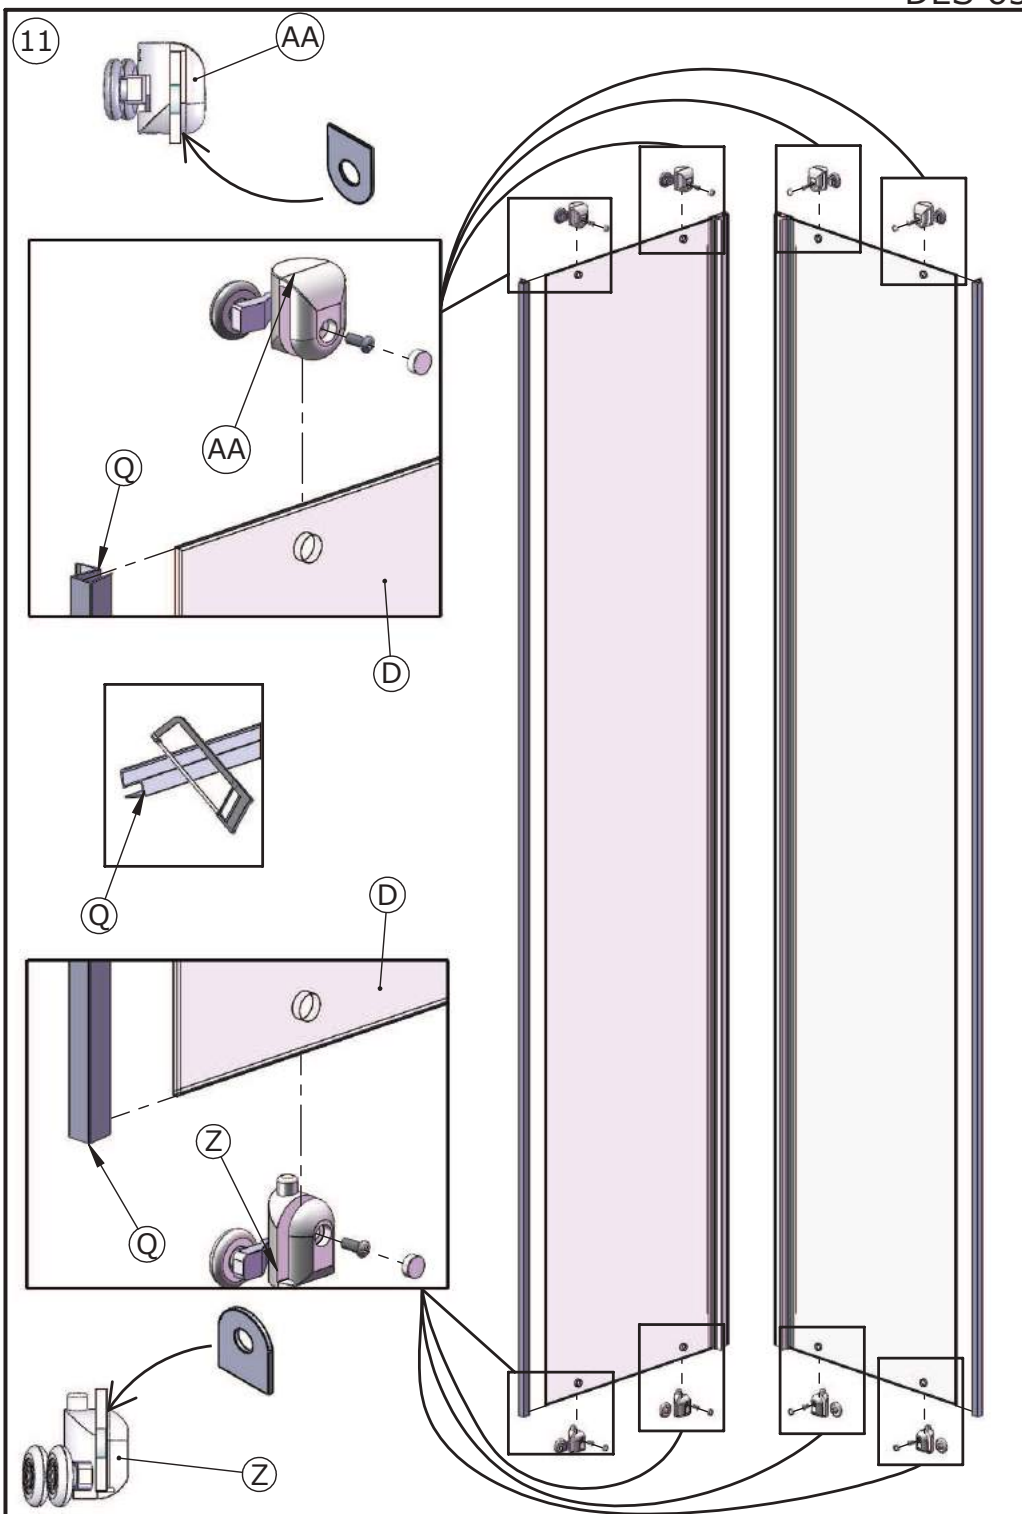




12

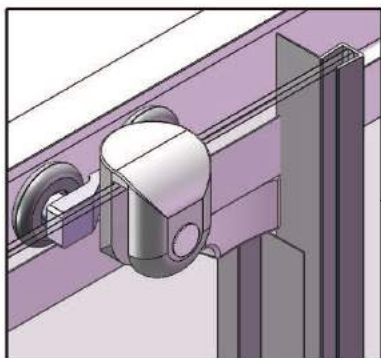






Réglage des portes

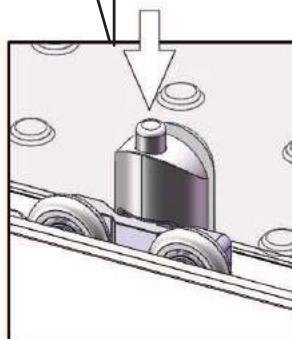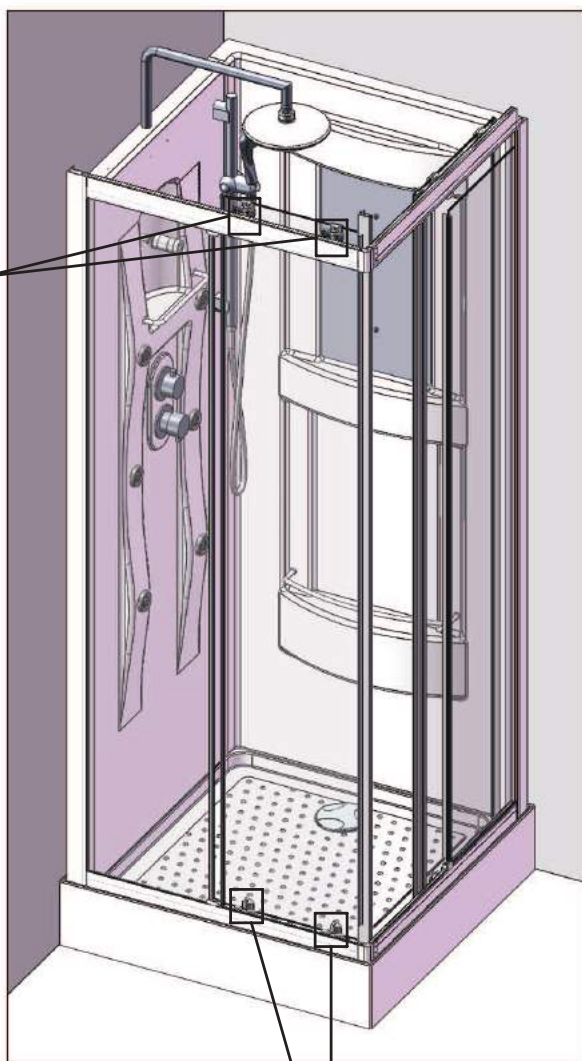


13

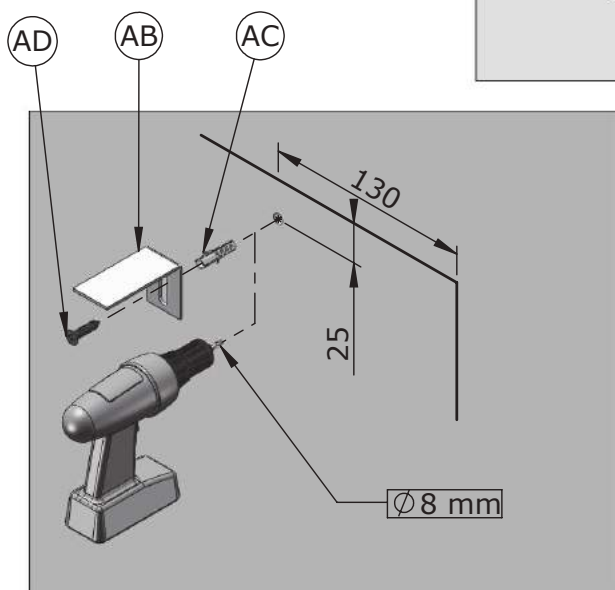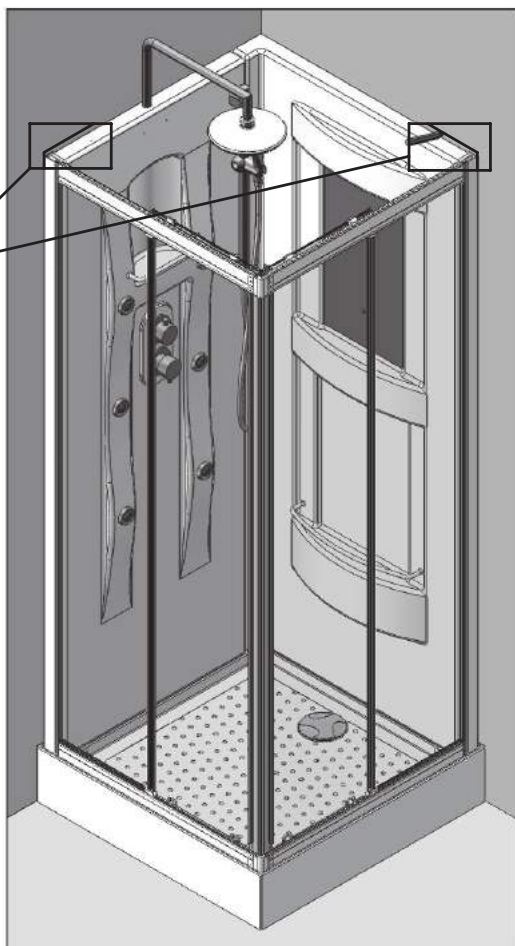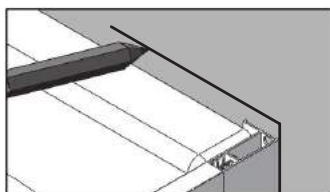

14

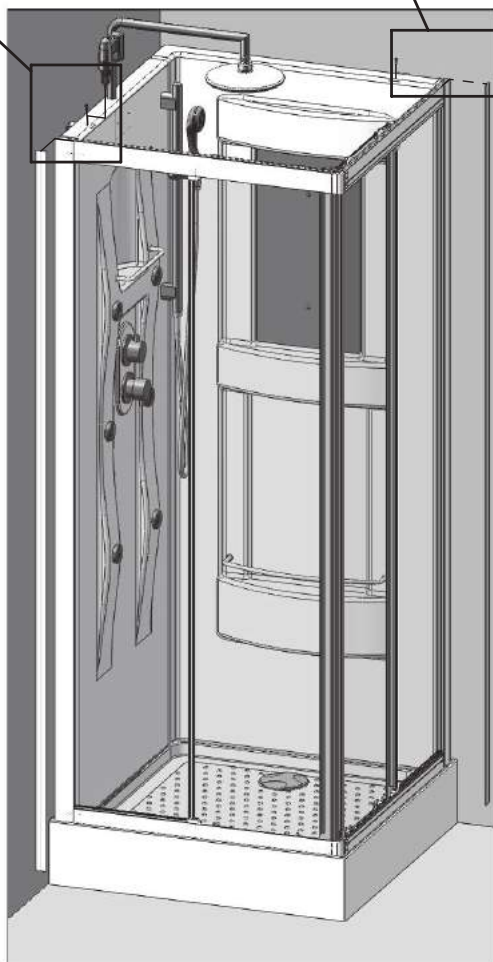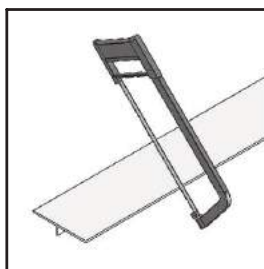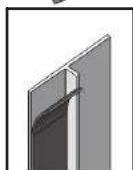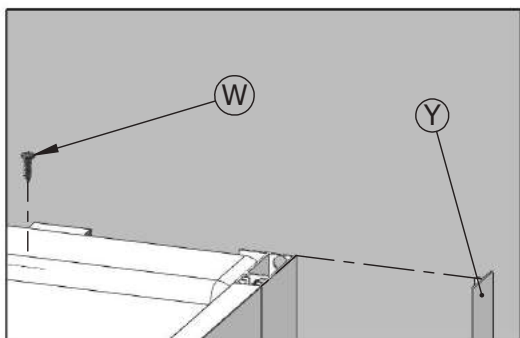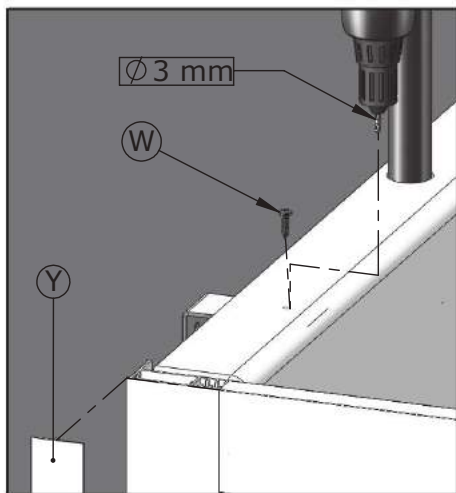

15

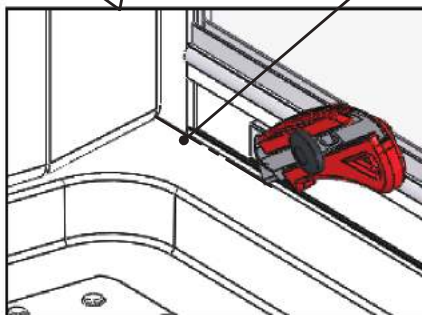

Découper et enlever la mousse, puis nettoyer.



SAV

SERVICE HELPLINES

ASSISTENZA POST- VENDITA

SERVICIO POSTVENTA

FRANCE

 **N°Azur 0 810 05 1998**
prix d'un appel local

UK

020 8842 0033

IRELAND

04697 33102

DEUTSCHLAND

0800 82 27 82 0

ITALIA

(0382) 6181

OSTEREICH

(0222) 21 402 16 0

SCHWEIZ

(01) 748 17 44

ESPANA

93 544 60 76

NEDERLAND

0475 487 100

BELGIË

+31 475 487 100

BELGIQUE

+31 475 487 100

РОССИЯ

963 19 40, 773 67 22



AQUAPRODUCTION, Site industriel, F - 44680 Chéméré

10

EN 14428

Paroi de douche, fabriquée en verre de silicate
sodo-calcique de sécurité trempé thermiquement

Aptitude au nettoyage : réussite

Résistance à l'impact/propriétés de fragmentation : réussite

Durée : réussite